


ercol

bosco

1365 2 door wardrobe

Thank you for purchasing this bosco wardrobe. Please read the instructions carefully before use to ensure safe and satisfactory operation of this product.

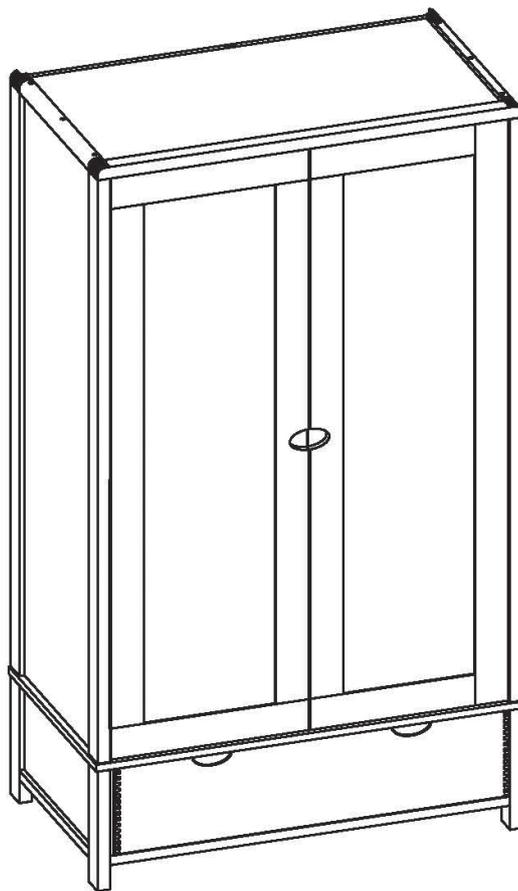

This product is **HEAVY**, Take care when lifting to avoid personal injury and (or) damage to the product.


Please check the pack contents before attempting to assemble this product. A full checklist of components is given in this leaflet. If any pieces are missing, please contact the retailer from whom you bought this product. The fittings pack contains **SMALL ITEMS** which should be **KEPT AWAY FROM YOUNG CHILDREN**.


Necessary Tools



Fittings and parts checklist


A	Drawer unit x 1
B	LH side panel x 1
C	RH side panel x 1
D	Door frame x 1
E	Back panel x 1
F	Top panel x 1

 G	Hanging rail x 1
H	30mm screws x 4 
I	'L' bracket x 1 
J	15mm screws x 2 
K	Wooden dowels x 8 
L	Wedge x 1 

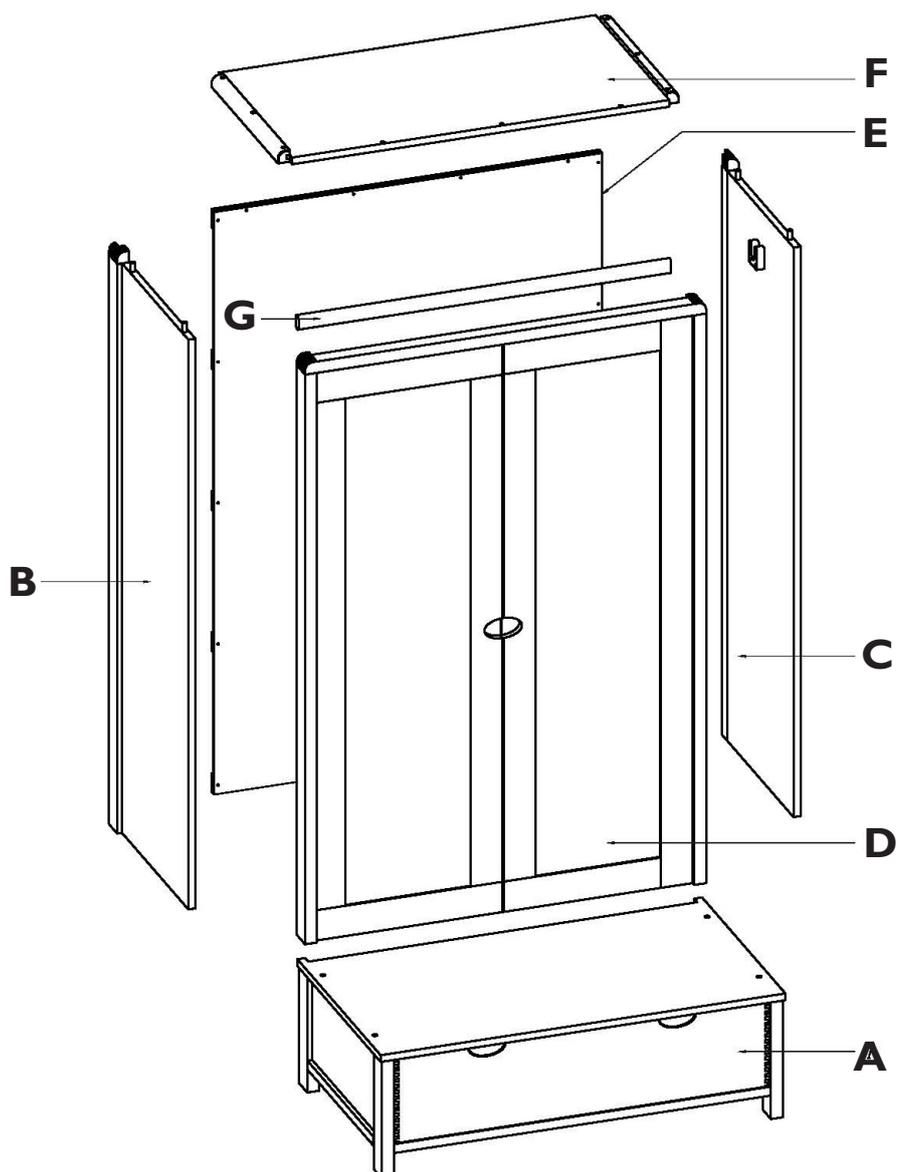


Step by step instructions

1, Check that all the wooden dowels are present in the side panels. See fig.1

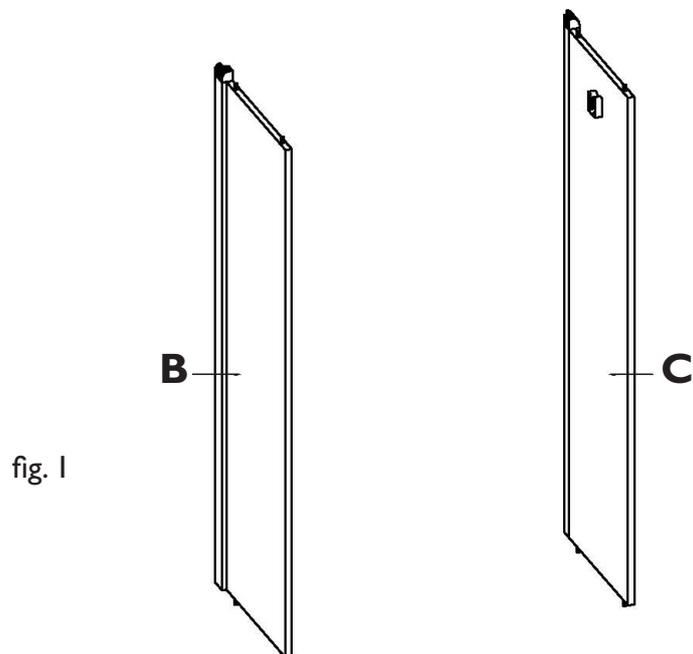

2. Locate the side panels B and C into the drawer unit A. Secure using 2 of the 30mm screws. Insert them at an angle (holes are pre drilled) through the rear post of each side panel. See fig 2

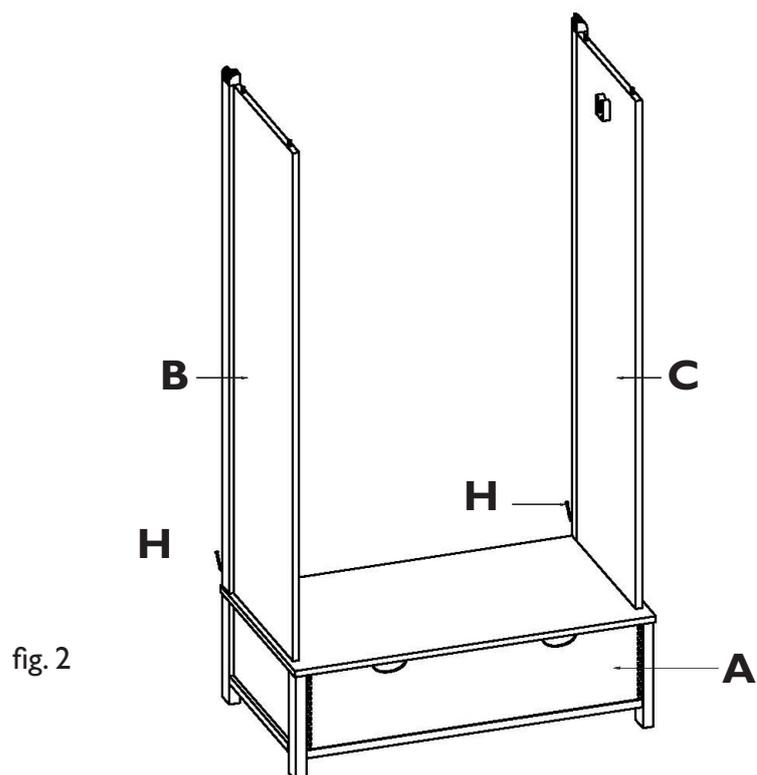


3. **fig. 3,4,5 and 6 are all shown without the doors for clarity of illustration.**

With the help of another person, locate the door frame section onto the front of the wardrobe as shown in fig 3. Secure to the side panels using 5 of the 30mm screws per side. Secure at the bottom using 4 of the 30mm screws inserted at an angle.



fig. 3

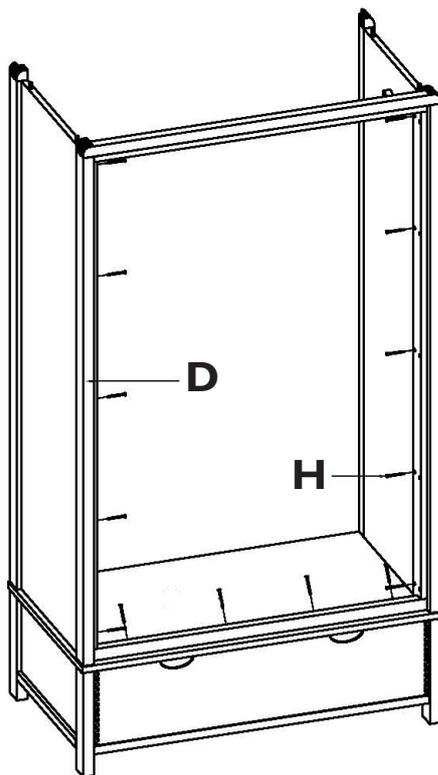

4. Locate the top panel as shown in fig.4 and secure using 6 of the 30mm screws. 3 on each side and 3 of the 30mm screws along the top of the door frame as shown.



 



fig. 4

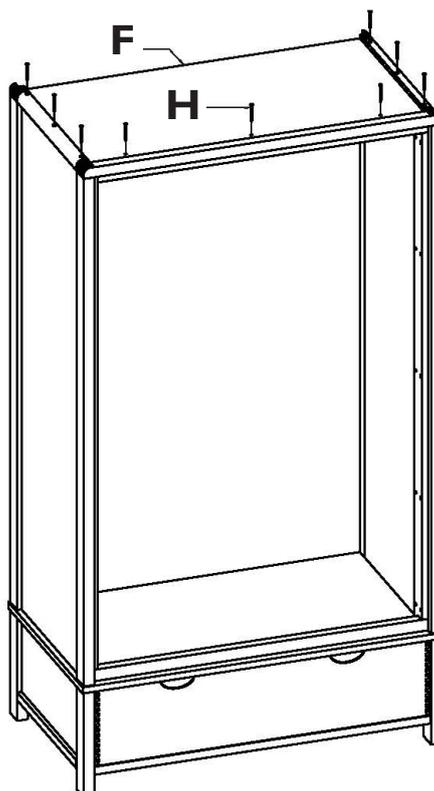


5. With the help of another person move the wardrobe close to it's final position. If your floor is uneven the other person may need to tilt the wardrobe slightly so that the doors remain square, while you secure the back panel using 16 x 30mm screws fig.5.

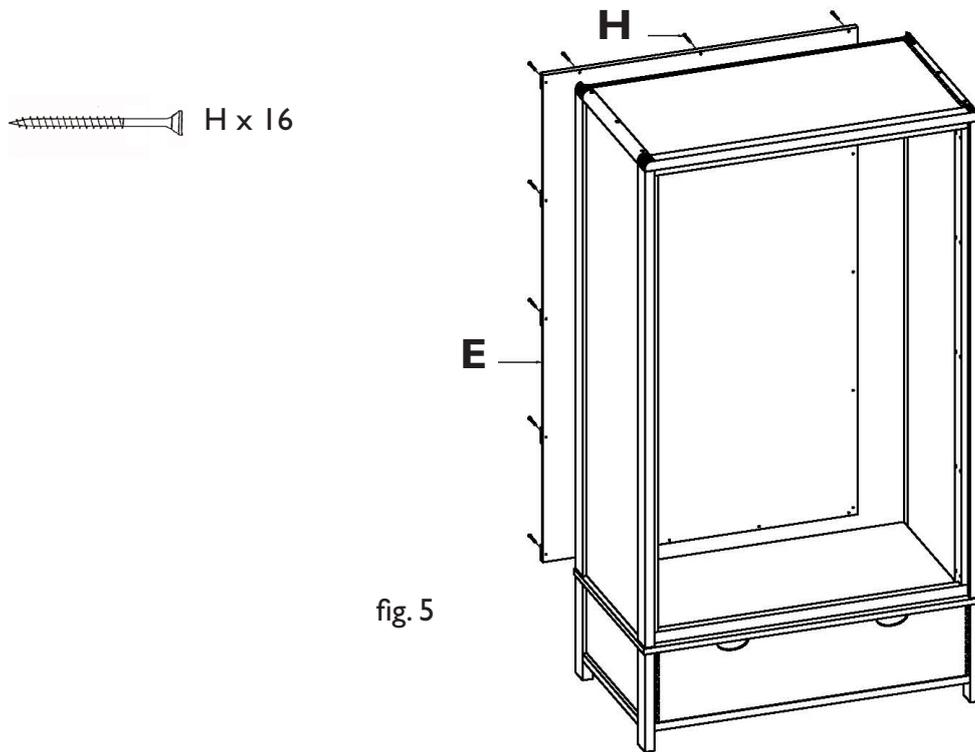

6. Put the hanging rail into it's rail supports. fig 6.

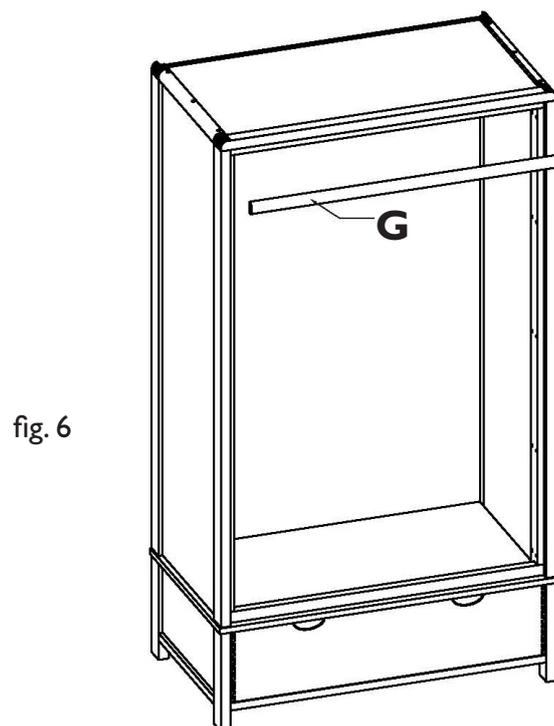


7. We recommend that you fix this wardrobe to the wall, using appropriate fixings for your type of wall, see fig.7

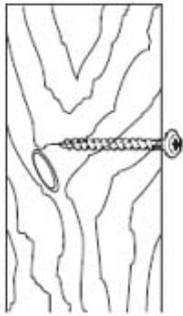


Wood

If fixing to wood make sure that it isn't chipboard as screws can easily pull away from the core structure

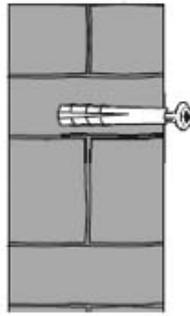

Brick or Masonry

Use an appropriate wall plug provided you are sure your wall is sound

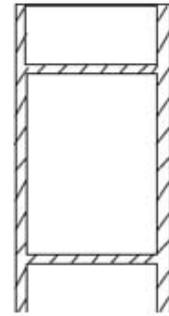

Cavity wall


Special toggle wall plugs are needed. Seek expert advice

fig. 7


Move the wardrobe into it's final position against the wall. Align the L bracket to the pre drilled holes on the top of your wardrobe in the middle along the back rail and using the 2 x 15mm screws fix the bracket to the top of your wardrobe. Then make a mark on your wall through the two holes of the bracket. Take the wardrobe away from the wall. Then drill two holes in your wall where your marks are. Move the wardrobe back into place, align the bracket up with the holes in your wall and partially tighten the bracket to the wall using appropriate fixings for your type of wall.

8. If the wardrobe needs levelling, use the wedges as shown in fig.8.


fig. 8

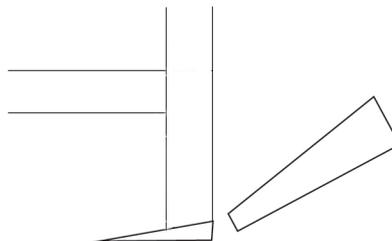


If the chest is not level on your floor, use the wedges provided. Snap them off, so they do not protrude out from the cabinets legs. You can also snap them lengthways. See diagram below.

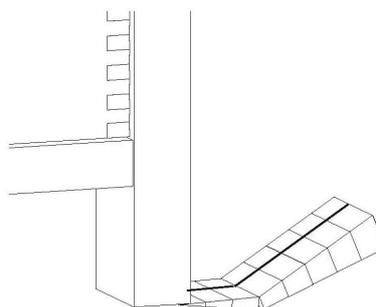

9. Check that the doors are aligned correctly. If necessary adjust the door hinges as shown in fig.9

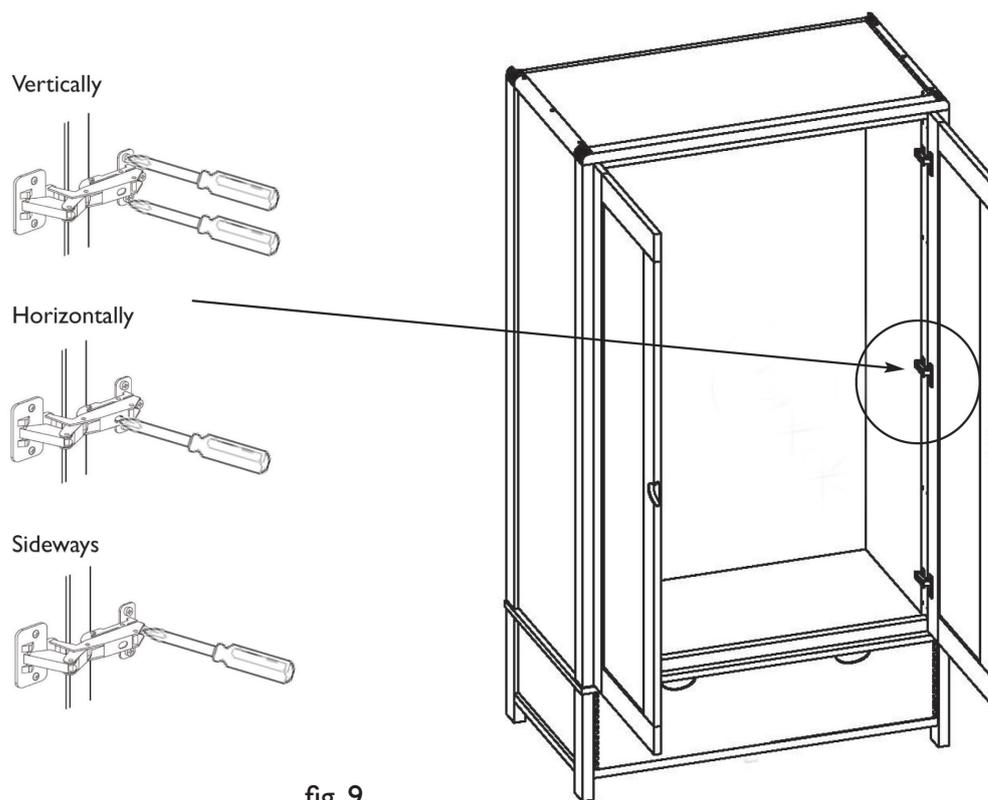

10. Finally, fully tighten the screws to secure the wardrobe to your wall fig.10

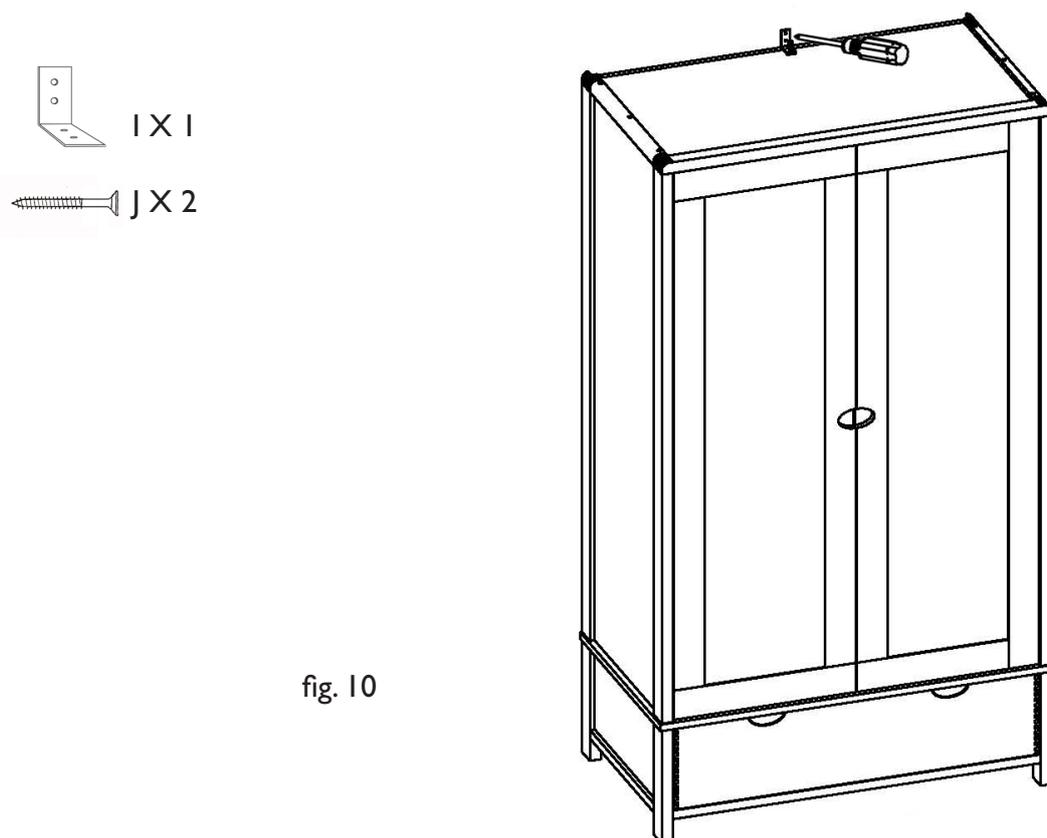

Care and maintenance

Wood Furniture

Wood displays different grain patterns depending on which way it is cut - for example, the 'medullary ray' which can appear on oak furniture is a mark of good quality timber - these are just characteristics of the natural beauty of the wood. Some furniture is also deliberately aged and rustic.

All timber surfaces will change colour and mellow over time. New furniture will initially vary in shade from items that have been previously purchased.

How to care for your wood furniture

Furniture with a hard lacquer, wax polish or painted surface should be dusted with a dry cloth. When using the surface for serving food and drinks it is best to use protective mats and coasters. Spillages should be wiped up as soon as possible.

Spray polishes are best avoided as they contain silicones which may spoil the furniture's surface by building up over time. Use of cleaning materials containing abrasive compounds, acidic or caustic reagents and any bleaches containing oxidising reagents should be avoided as prolonged use may damage the lacquer surface. Wipe up spills immediately. If sticky marks occur on the surface they can be removed with a dilute solution of warm soapy water. The offending area should be rubbed lightly and then completely dried immediately afterwards, before replacing any mats etc.

Our furniture will endure most temperatures in the home but it is best to avoid placing furniture next to heat sources such as radiators or fires. Be particularly careful with solid wood as the lack of humidity caused by central heating can cause damage such as warping.

Safety Instructions

Never drag furniture when moving it, always lift it. Please take care when handling or moving the furniture as careless handling may cause damage or injury. No liability will be accepted for damage or injury caused by incorrectly installed furniture.

PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE

Ercol Furniture Ltd, Summerleys Road, Princes Risborough, Buckinghamshire. HP27 9PX www.ercol.com